

NOTAM FORMAT

Priority Indicator	GG										→
Address	MHTG YNYX										
Date and time of filing	03 22 18										←=
Originator's Indicator	MZBZLYNX										→
Message Series, Number and Identifier											←= (
NOTAM containing new information	(series and number/year) NOTAMN										
NOTAM replacing a previous NOTAM	A0066/15 (series and number/year) NOTAMR A0063/15 (series and number/year of NOTAM to be replaced)										
NOTAM cancelling a previous NOTAM	(series and number/year) NOTAMC (series and number/year of NOTAM to be cancelled)										←=
Qualifiers											
FIR	NOTAM Code	Traffic	Purpose	Scope	Lower Limit	Upper Limit	Coordinates, Radius				
Q M H T G	Q 1 G A S	/ I	N B 0	/ A	0 0	9 9 9					←=
Identification of ICAO location indicator in which the facility, air space or condition reported on is located							A) MZBZ				→
Period of Validity											
From (date-time group)	B) 1 5 0 7 0 3 2 3 0 0										→
To (PERM or date-time group)	C) 1 5 1 0 0 3 2 3 5 9										EST* PERM* ←=
Time Schedule (if applicable)	D)										→
Text of NOTAM: Plain Language Entry (using ICAO Abbreviations)											←=
E) ILS GP Rwy 07 U/S											
Lower Limit	F)										←=
Upper Limit	G)										→
Signature) ←=

*Delete as appropriate

Figure 6-A-1. NOTAM Format